


LVL40 Headset for Nintendo Switch Fortnite Settings Guide

Starting at the **Lobby** (Where your character is standing still, **Press the + Button** to go to the **Menu**, select **Settings** and **Press A**).

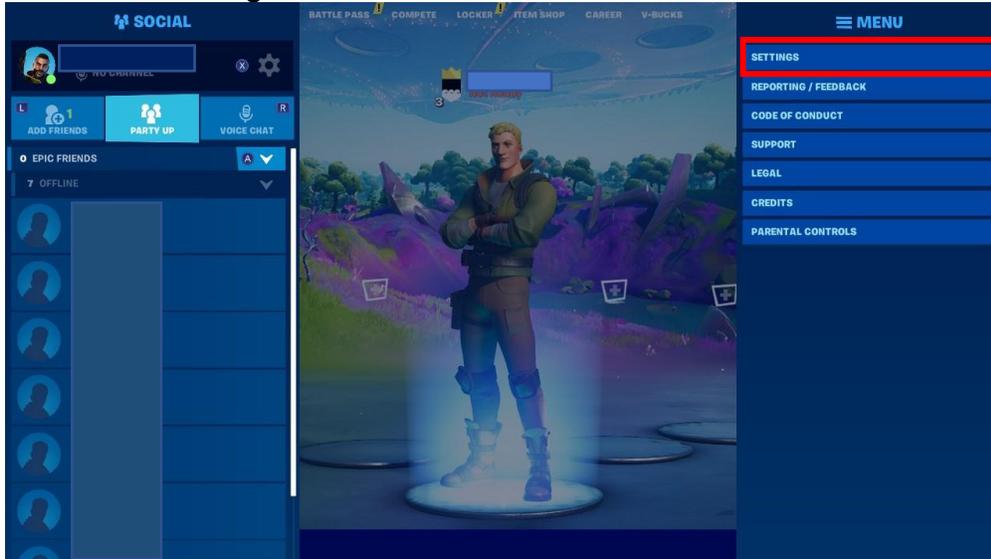


Now navigate to the **Audio settings**. This is represented by a speaker icon.
Next, look down at the **Voice Chat** section.

Change the **Voice Chat** setting to **EVERYBODY**.

Change the **Voice Chat Method** to **Open Mic**.

Change the **Voice Channel** to **Game**.

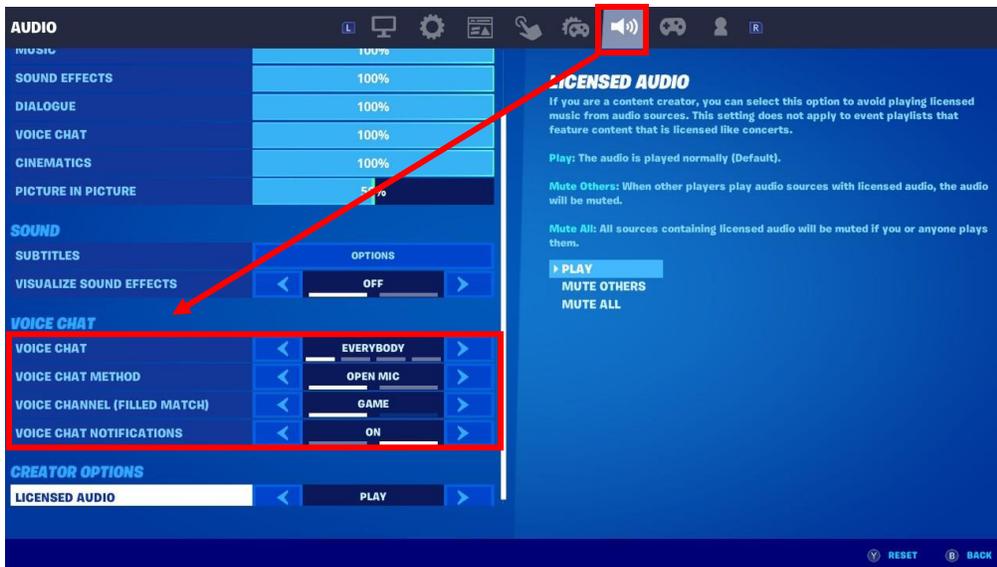


Make sure **Voice Chat Notifications** are set to **ON**.

Press X to Apply the changes, and **Press B to Save** and exit the **Settings**.

*Test the voice chat out.

If the settings were already set correctly, let's try the following.

In Fortnite, Press the + Button to go to the Menu and select Settings and Press A.

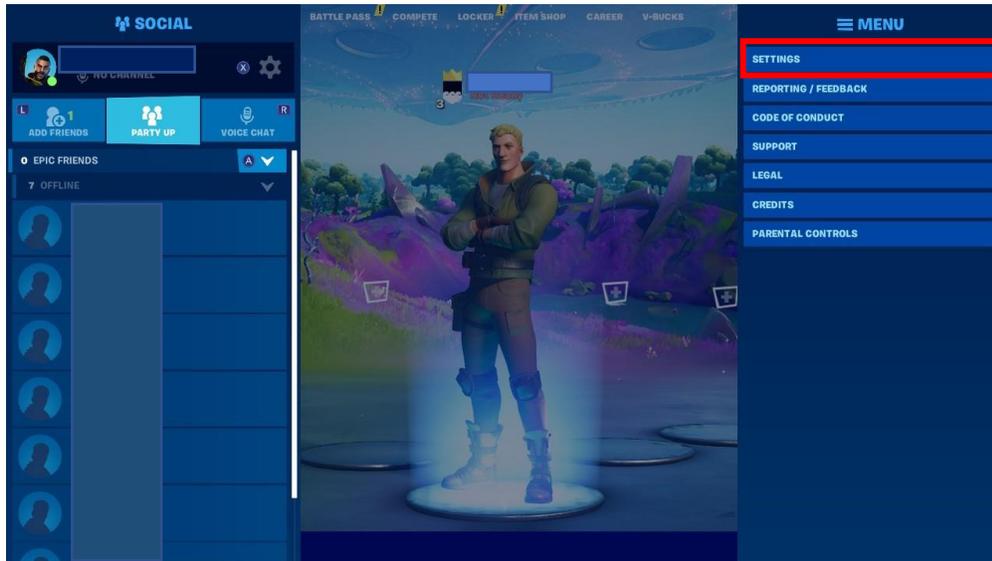

Now navigate to the **Audio settings**. This is represented by a speaker icon.
Change **Voice Chat** from **EVERYBODY** to **NOBODY**.

Change **Voice Chat Method** from **Open Mic** to **Push-To-Talk**.


Press **X** to **Apply** the changes, and Press **B** to **Save** and exit the **Settings**.

Press the + Button to go to the Menu and select Settings and Press A.


Now navigate to the **Audio settings**. This is represented by a speaker icon.

Change the **Voice Chat** from **NOBODY** back to **EVERYBODY**.

Change the **Voice Chat Method** from **Push-To-Talk** back to **Open Mic**.

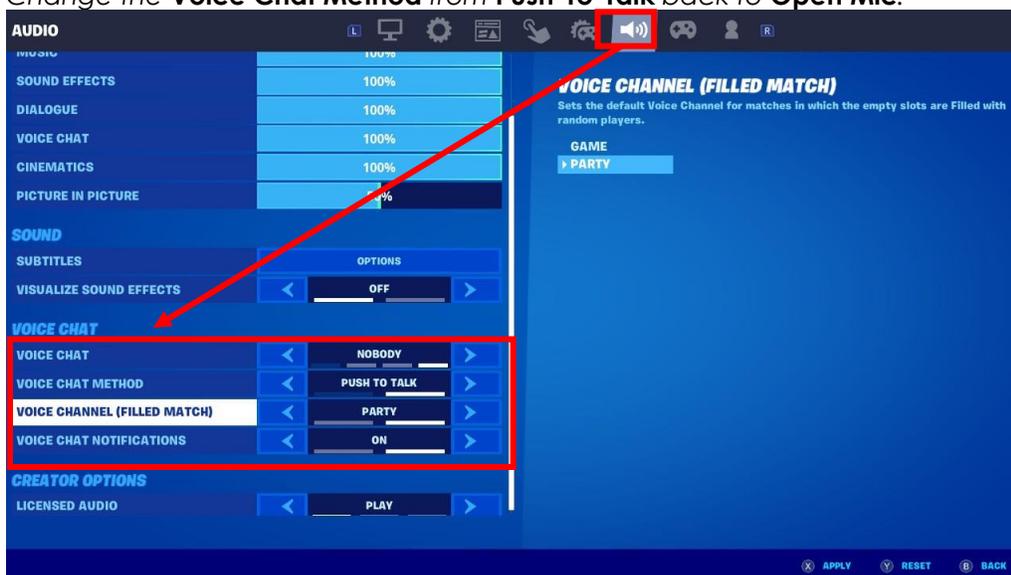

Press X to Apply the changes, and **Press B to Save** and exit the **Settings**.
Press the Home Button on your Switch, then **Press X to Close Software** and exit Fortnite completely.

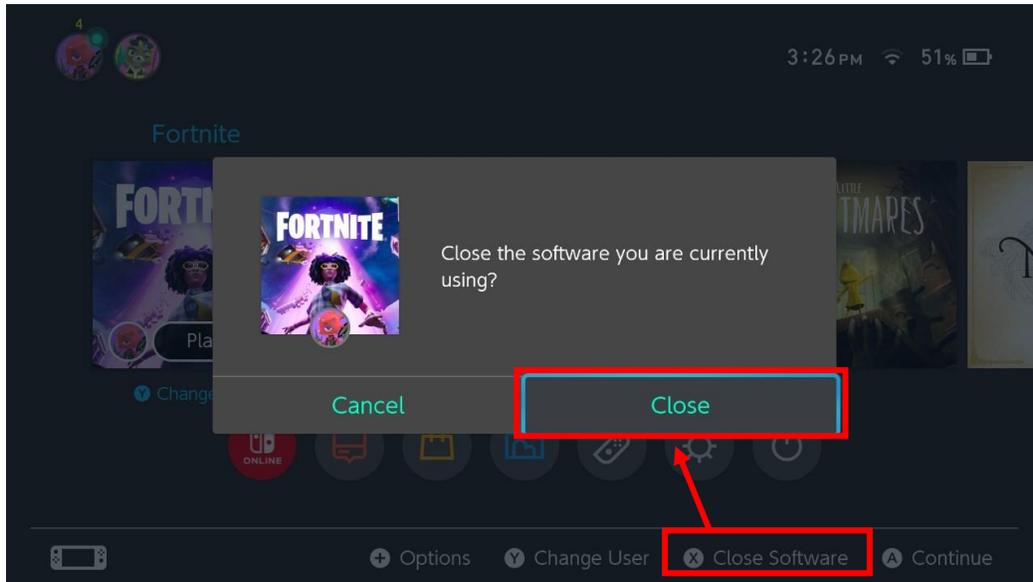

Restart Fortnite and test the microphone in a Fortnite match.

Make sure that the microphone is un-muted.